


Part # 1017838
 Accessory Mounting Brackets
 Revolution Hydraulic Lift (Pair)

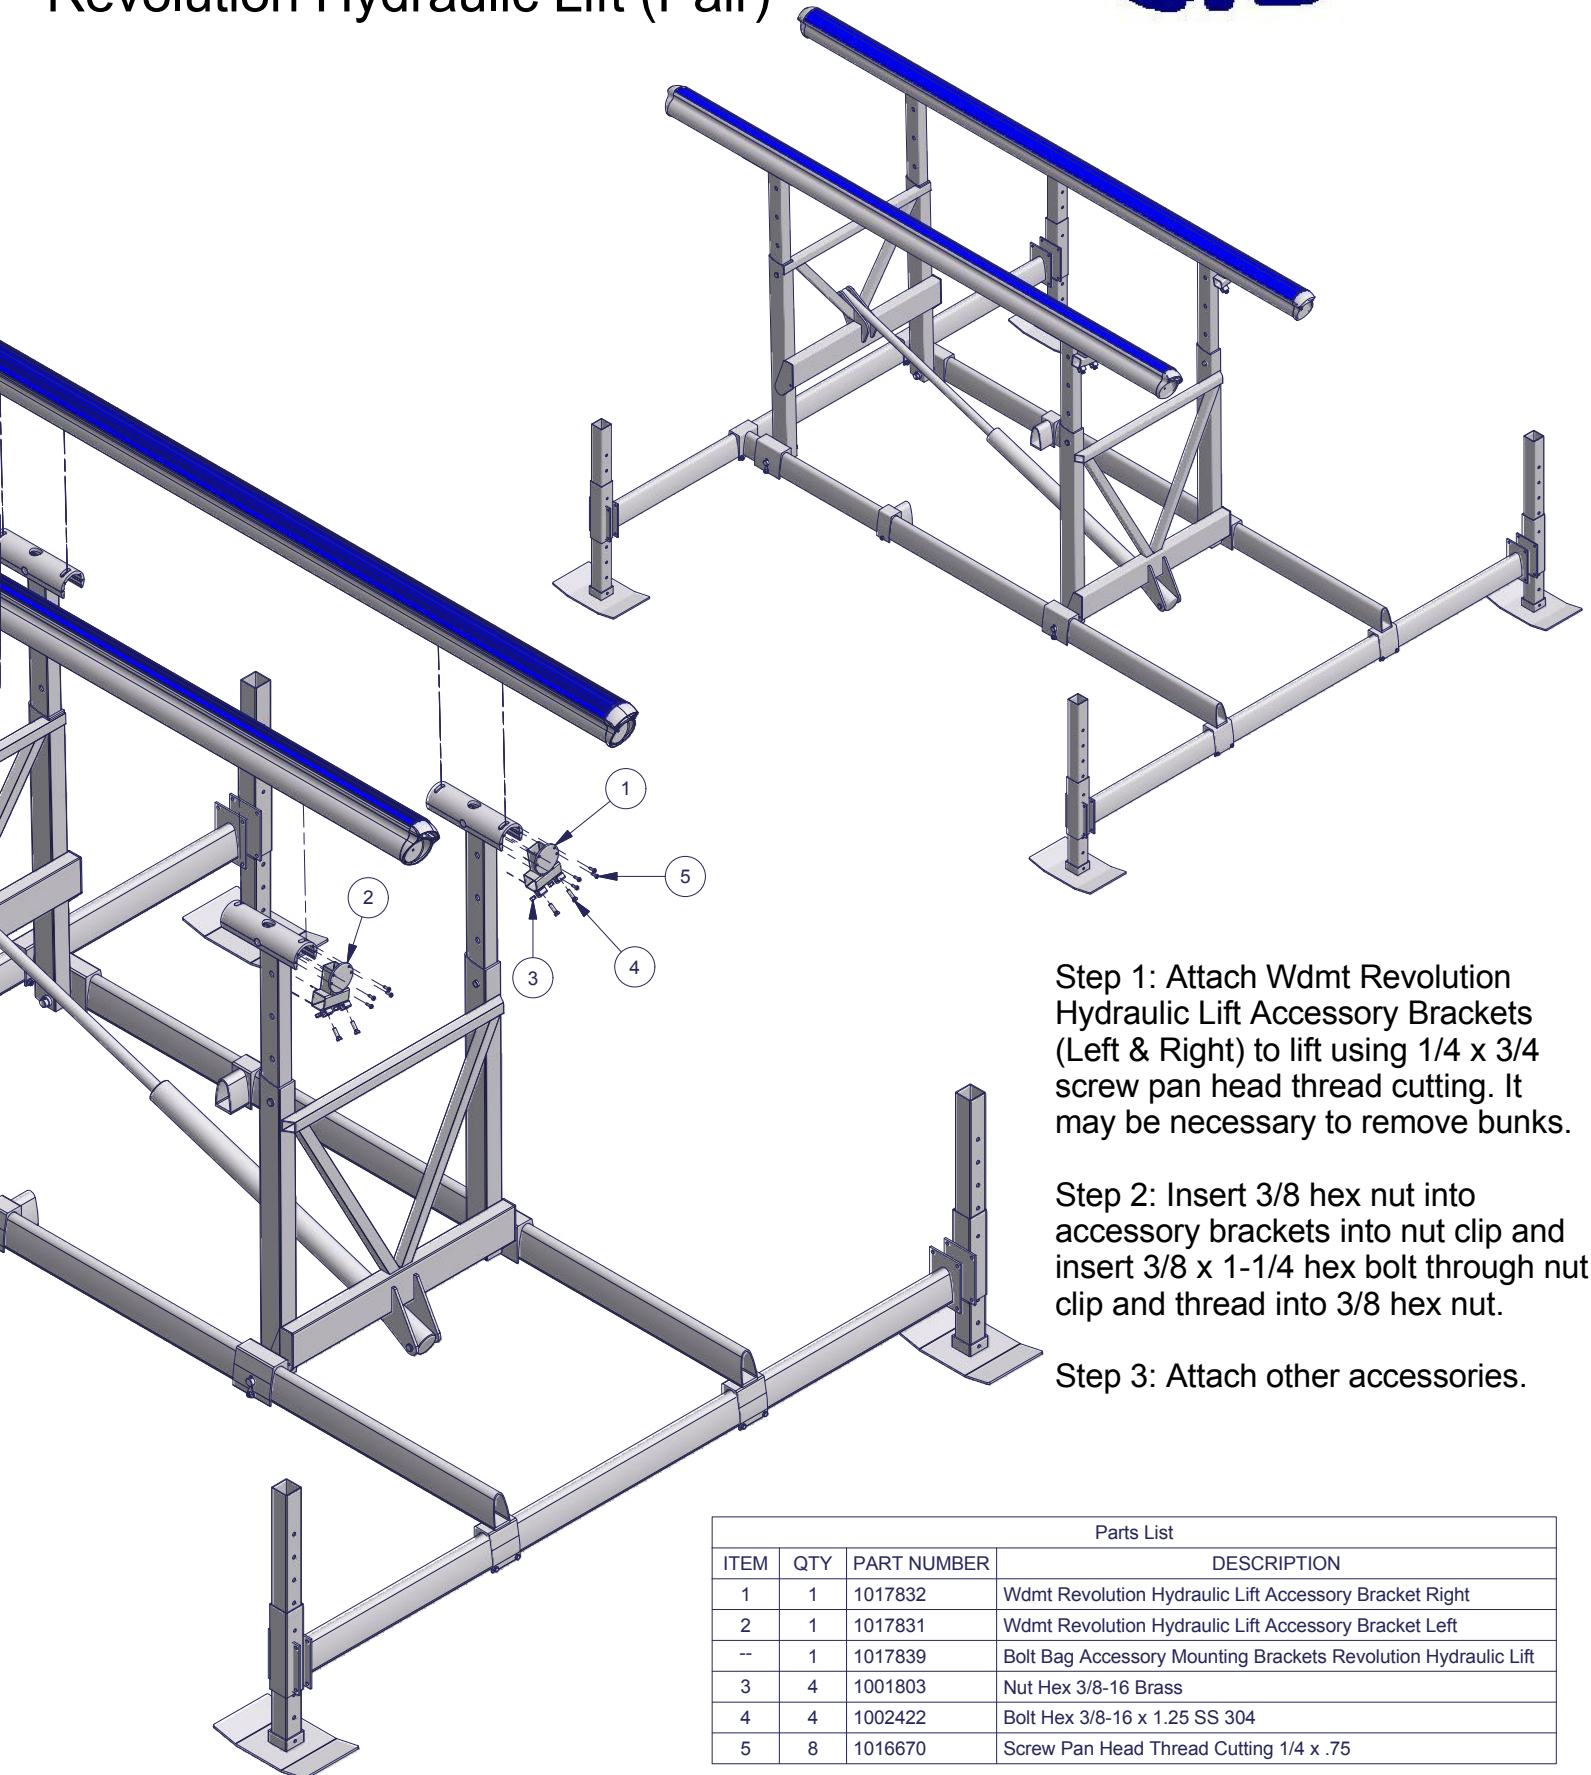

Step 1: Attach Wdmt Revolution Hydraulic Lift Accessory Brackets (Left & Right) to lift using 1/4 x 3/4 screw pan head thread cutting. It may be necessary to remove bunks.

Step 2: Insert 3/8 hex nut into accessory brackets into nut clip and insert 3/8 x 1-1/4 hex bolt through nut clip and thread into 3/8 hex nut.

Step 3: Attach other accessories.

Parts List			
ITEM	QTY	PART NUMBER	DESCRIPTION
1	1	1017832	Wdmt Revolution Hydraulic Lift Accessory Bracket Right
2	1	1017831	Wdmt Revolution Hydraulic Lift Accessory Bracket Left
--	1	1017839	Bolt Bag Accessory Mounting Brackets Revolution Hydraulic Lift
3	4	1001803	Nut Hex 3/8-16 Brass
4	4	1002422	Bolt Hex 3/8-16 x 1.25 SS 304
5	8	1016670	Screw Pan Head Thread Cutting 1/4 x .75