


Part # 1017845

Accessory - Motor Stop Revolution Hydraulic Lift



Note: If you are also using the Guide-Ons you will not need the Prt Tube 1.66 OD x 12.0 - Motor Stop. The Wdmt Revolution Hydraulic Lift Pipe Coupler 1.5 will be attached to the Guide-On Bent Tube.

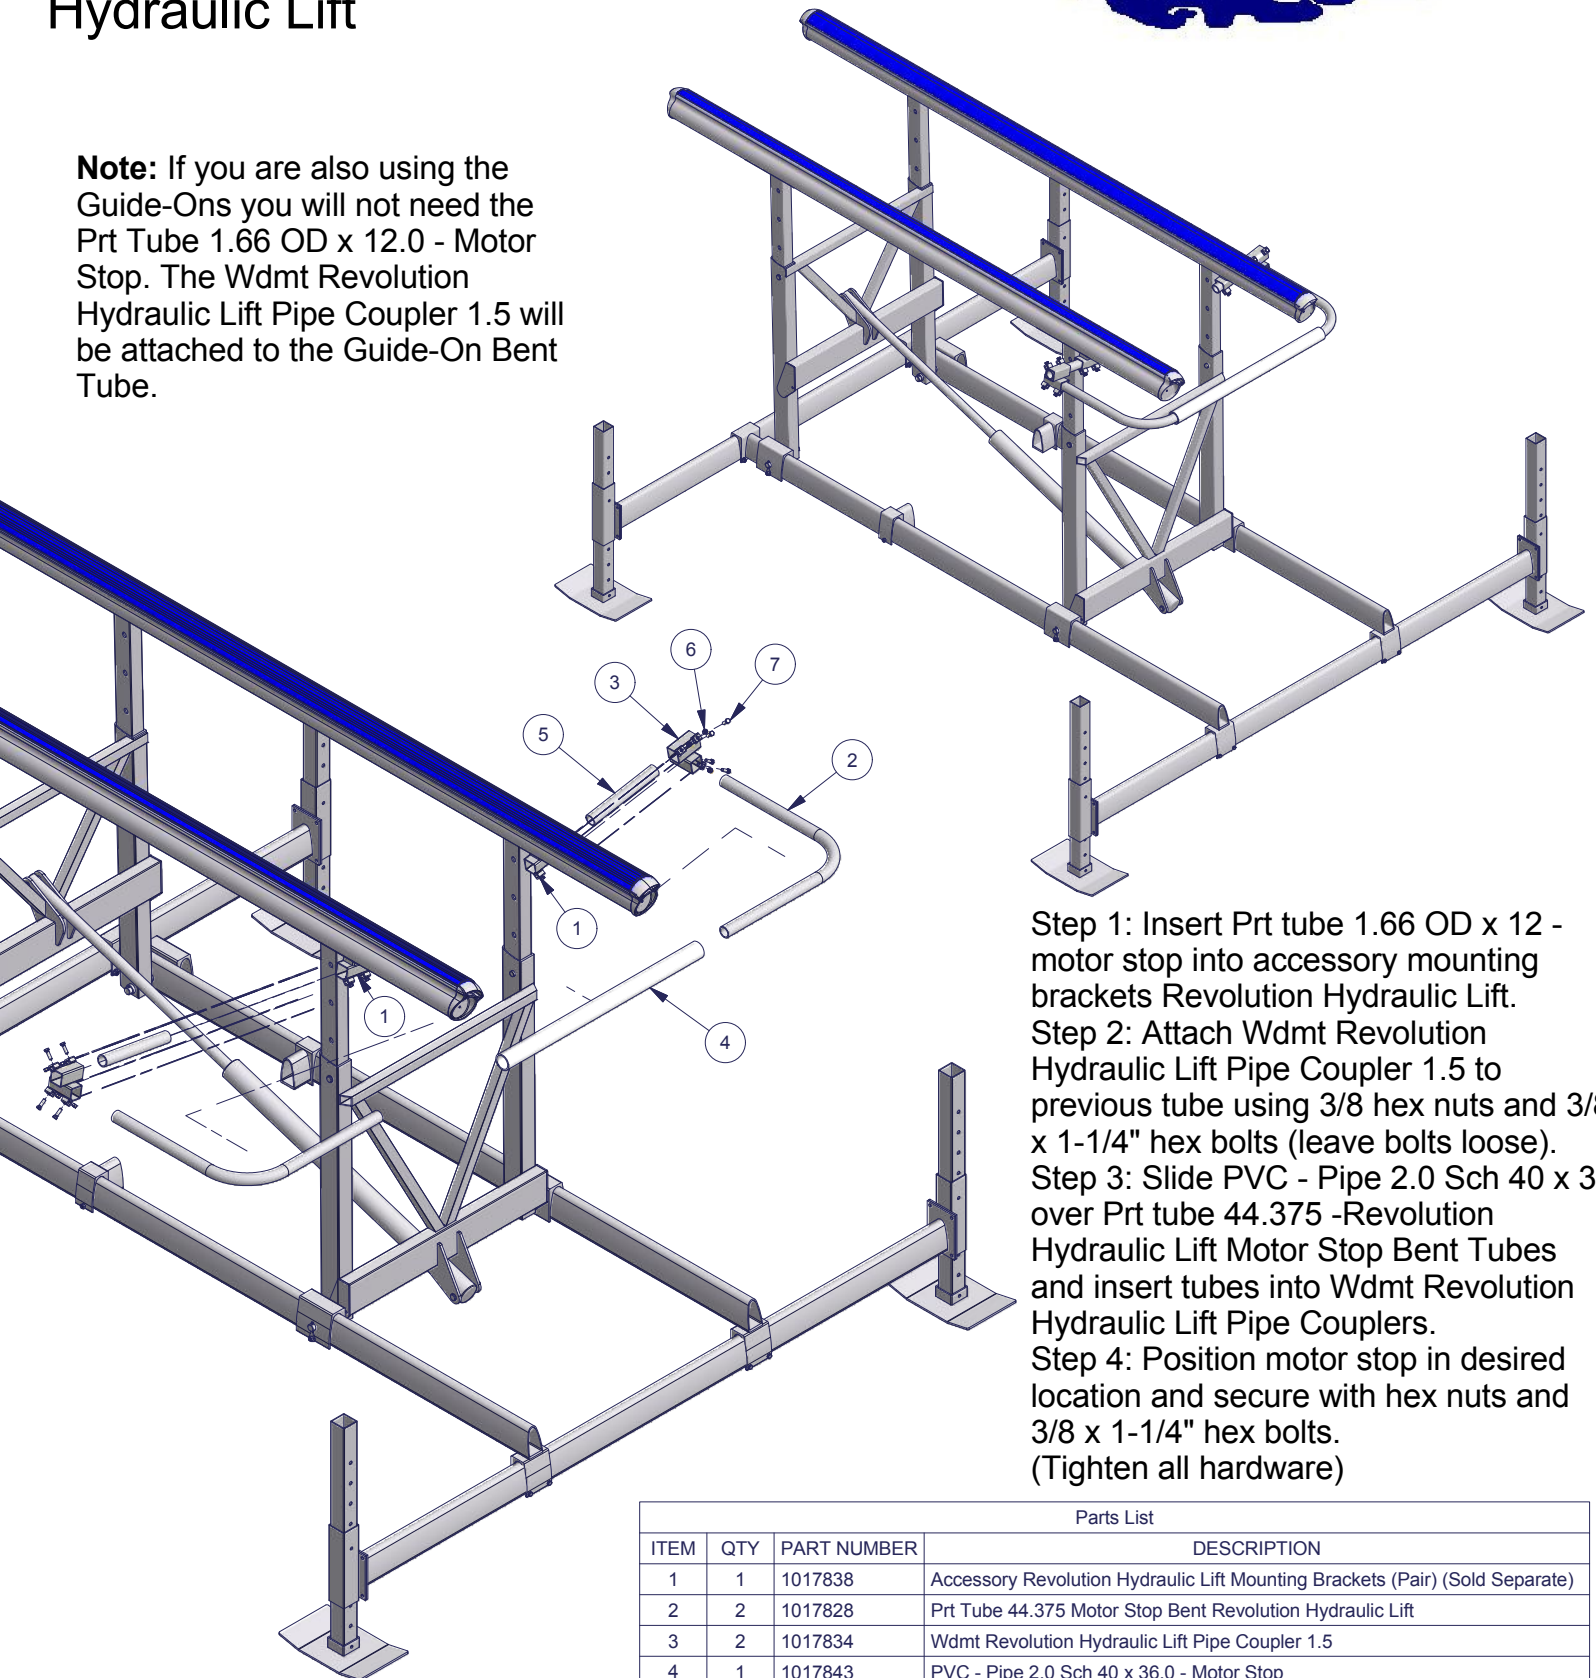

Step 1: Insert Prt tube 1.66 OD x 12 - motor stop into accessory mounting brackets Revolution Hydraulic Lift.
 Step 2: Attach Wdmt Revolution Hydraulic Lift Pipe Coupler 1.5 to previous tube using 3/8 hex nuts and 3/8 x 1-1/4" hex bolts (leave bolts loose).
 Step 3: Slide PVC - Pipe 2.0 Sch 40 x 36 over Prt tube 44.375 - Revolution Hydraulic Lift Motor Stop Bent Tubes and insert tubes into Wdmt Revolution Hydraulic Lift Pipe Couplers.
 Step 4: Position motor stop in desired location and secure with hex nuts and 3/8 x 1-1/4" hex bolts.
 (Tighten all hardware)

Parts List			
ITEM	QTY	PART NUMBER	DESCRIPTION
1	1	1017838	Accessory Revolution Hydraulic Lift Mounting Brackets (Pair) (Sold Separate)
2	2	1017828	Prt Tube 44.375 Motor Stop Bent Revolution Hydraulic Lift
3	2	1017834	Wdmt Revolution Hydraulic Lift Pipe Coupler 1.5
4	1	1017843	PVC - Pipe 2.0 Sch 40 x 36.0 - Motor Stop
5	2	1017844	Prt Tube 1.66 OD x 12.0 Motor Stop Revolution Hydraulic Lift
--	1	1017846	Bolt Bag - Accessory Motor Stop Revolution Hydraulic Lift
6	8	1001803	Nut Hex 3/8-16 Brass
7	8	1002422	Bolt Hex 3/8-16 x 1.25 SS 304