


## Adjustable Motor Stop

1. Bolt the adjustable motor stop frame to each motor stop leg with one 3/8" x 2" machine bolt and one 3/8" nut.
2. Slide the channels on the motor stop legs over the rear beam. Center the complete motor stop on the beam and bolt in place with one 3/8" x 3" machine bolt and one 3/8" flange nut for each leg.

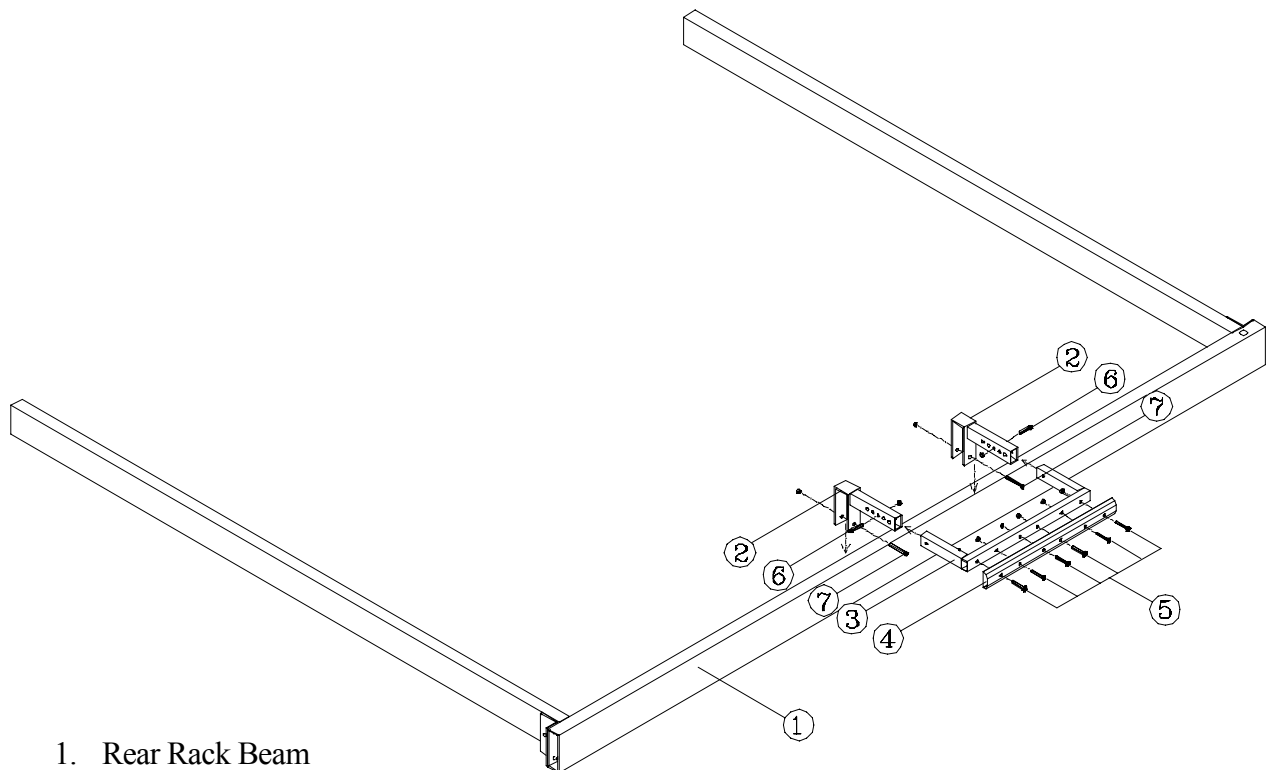

1. Rear Rack Beam
2. Motor Stop Leg, (Two)
3. Adjustable Motor Stop Frame, (One)
4. Adjustable Motor Stop Rubber, (One)
6. One 3/8" x 2" Machine Bolt, One 3/8" Nut, (Two Places)
7. One 3/8" x 3" Machine Bolt, One 3/8" Nut, (Two Places)