



Part # 1015643


Dock Box Frame for Floating Dock Instructions

Note: To attach to poly dock use a 2x4x12 float and use a 2x4x20 float to attach to FTS9 truss dock.

Step 1: Attach float to dock box frame using 3/8 x 2.5 hex bolt, washer, fender washer and lock nut.

Step 2: Attach dock box frame to dock accessory connector using 3/8 carriage bolts and flange nuts supplied with accessory bracket.

Step 3: Center dock box on frame. Attach dock box to dock box frame using #12 x 1 oval screws and #14 finish washers. You will have to pre-drill the holes for the screws.

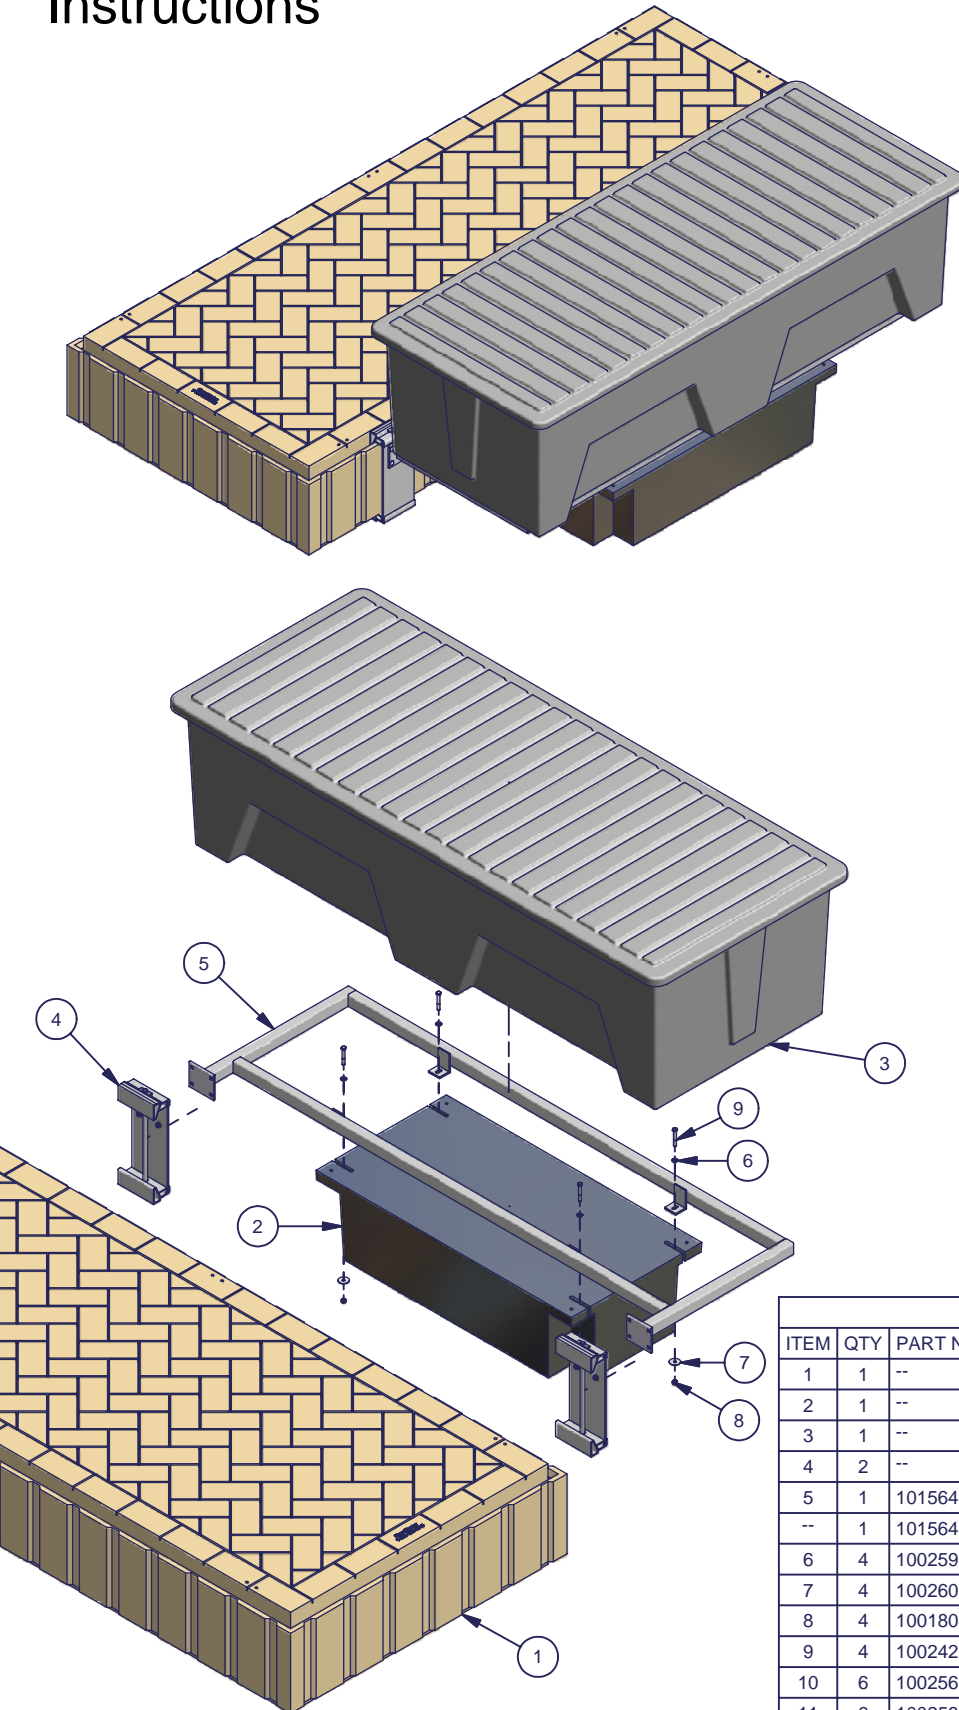

Parts List			
ITEM	QTY	PART NUMBER	DESCRIPTION
1	1	--	Poly Dock or FTS9 (sold separate)
2	1	--	2' x 4' x 12" Float or 2' x 4' x 20" Float (sold separate)
3	1	--	7' Dock Box (sold separate)
4	2	--	Poly Dock Acc Connector or TS9 Acc Connector (sold separate)
5	1	1015645	Wdmt 7' Dock Box Frame for Floating Dock
--	1	1015644	Bolt Bag - Dock Box Frame for Floating Dock
6	4	1002599	Washer Flat 3/8 SS
7	4	1002601	Washer Fender 3/8 x 1.5 SS
8	4	1001805	Nut Nyloc 3/8-16 Brass
9	4	1002427	Bolt Hex 3/8-16 x 2.5 SS 304
10	6	1002566	Screw Oval #12 x 1.0 SS
11	6	1002581	Washer Finish #14 SS